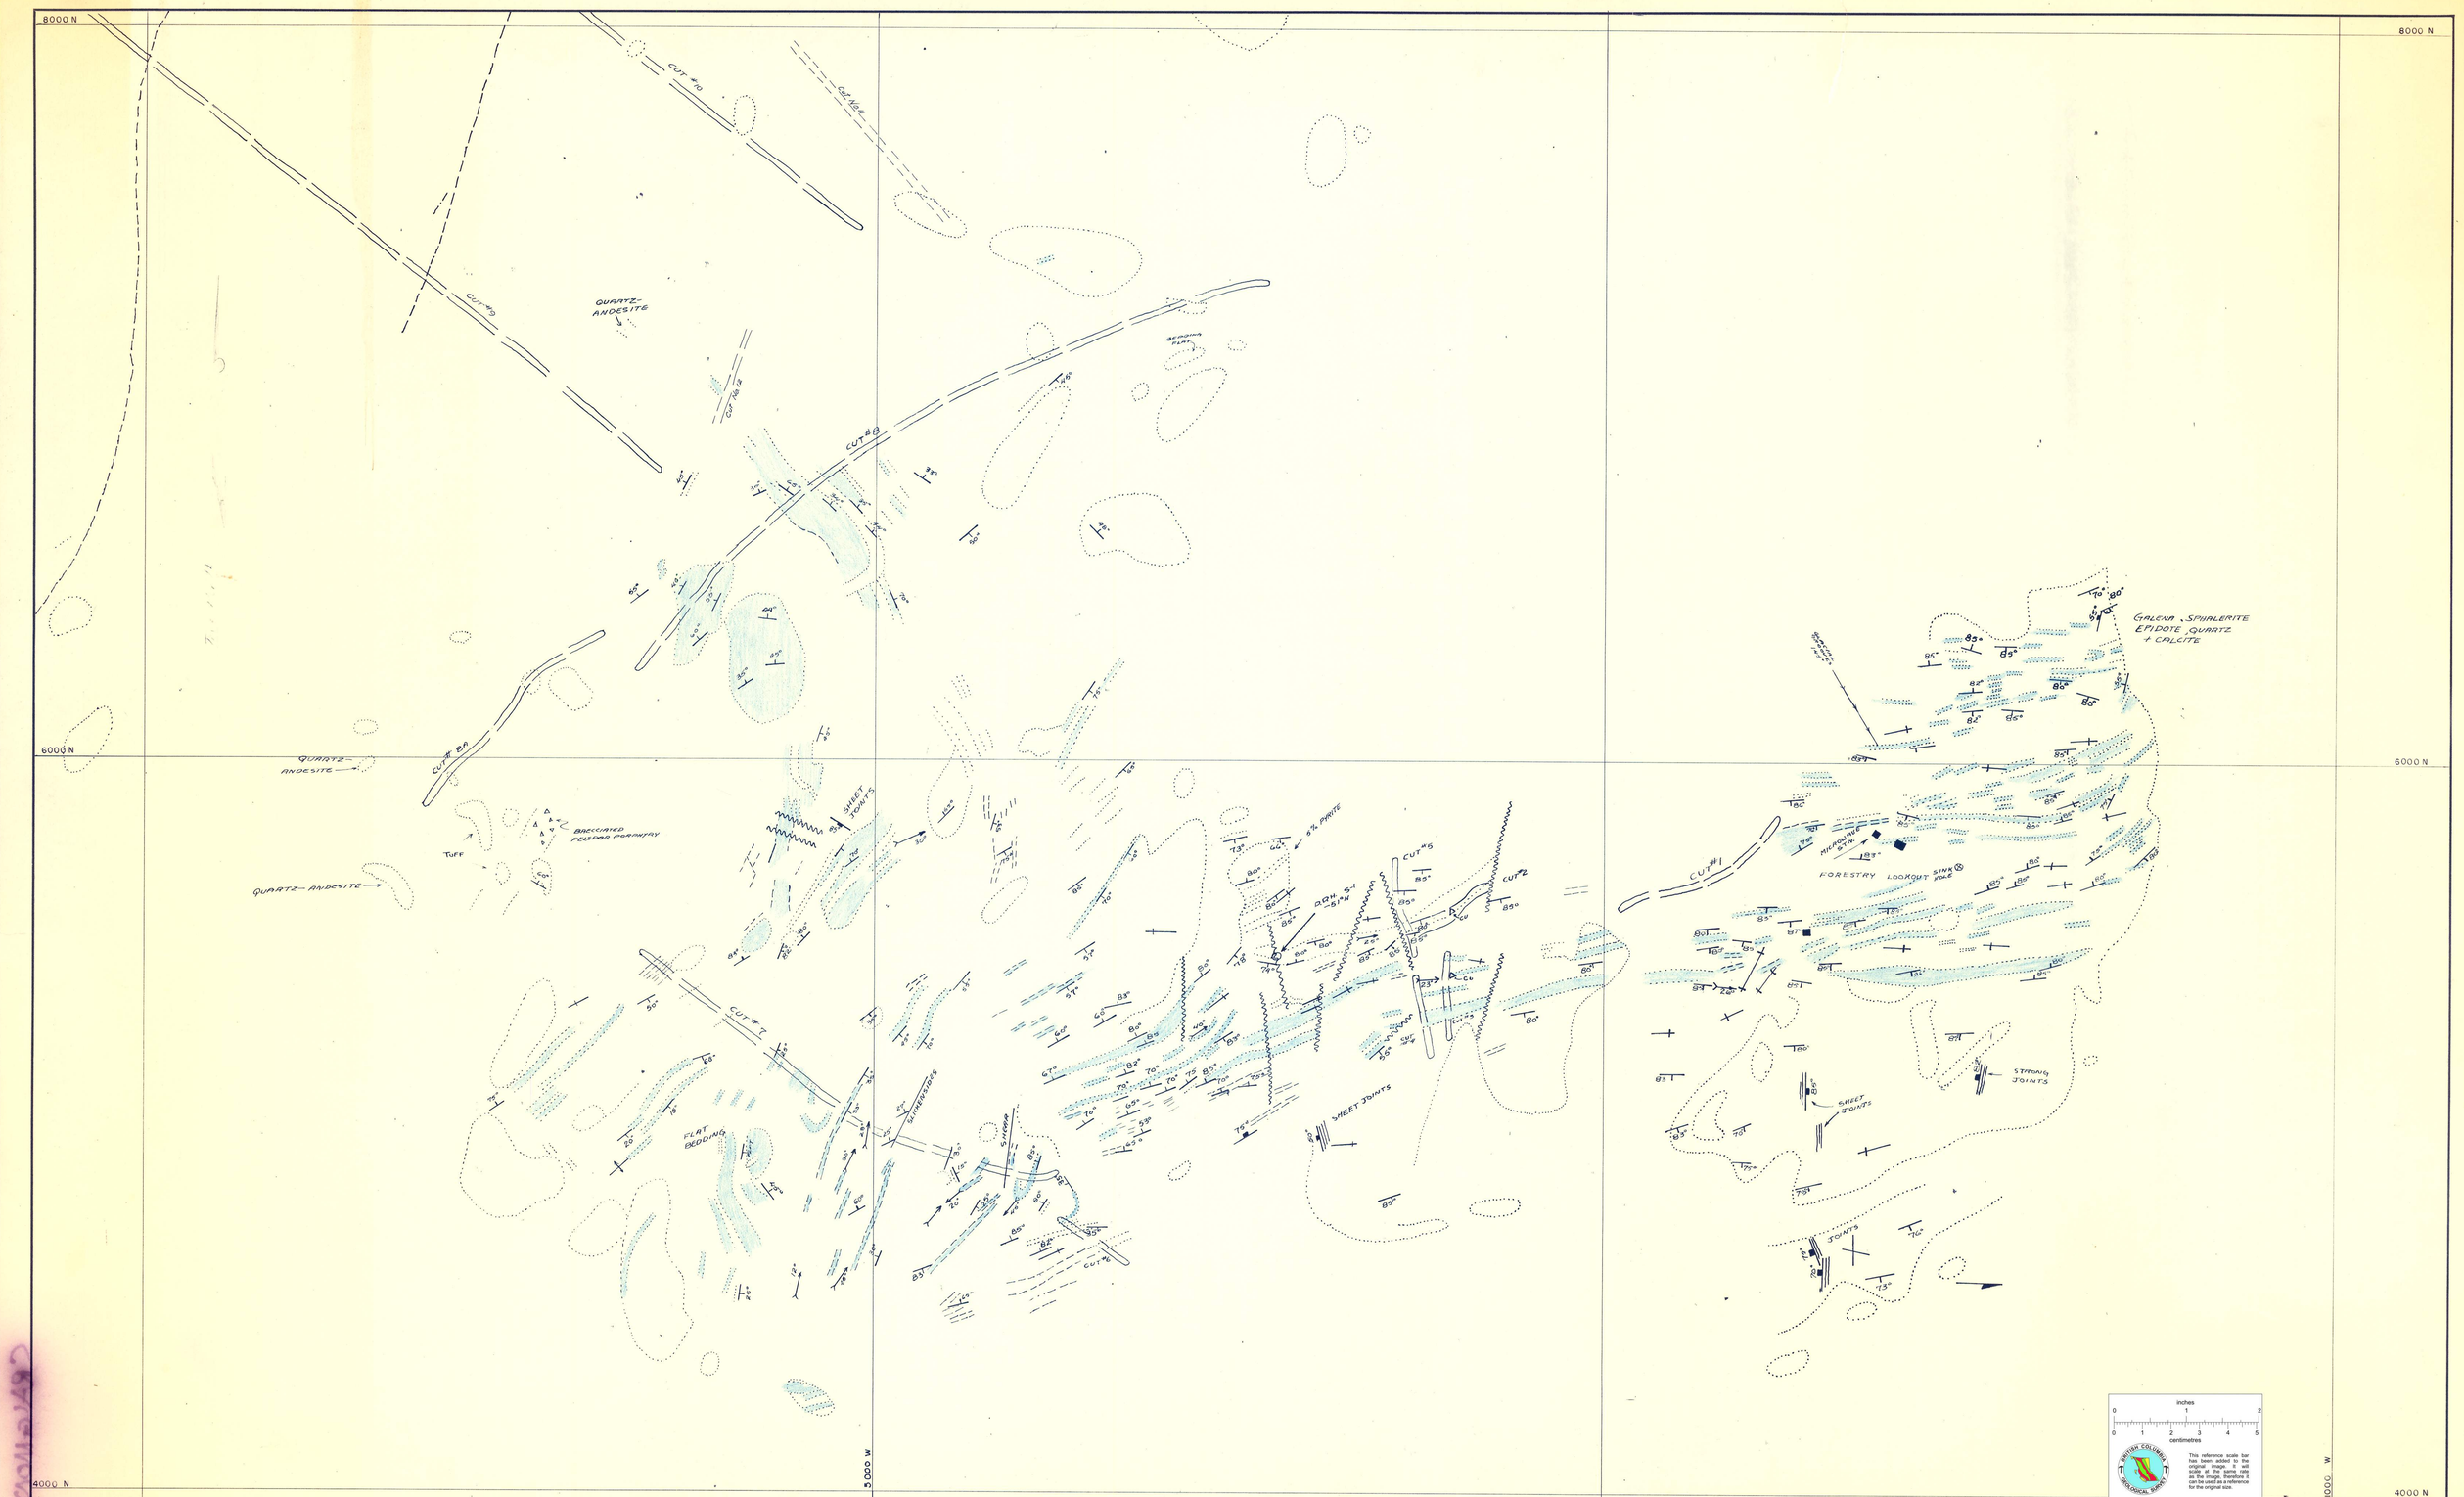
8000 N
6000 N
4000 N
7000 W
5000 W
3000 W
1000 W
CUT #10
CUT #9
CUT #8
CUT #7
CUT #6
CUT #5
CUT #4
CUT #3
CUT #2
CUT #1
QUARTZ-ANDESITE
QUARTZ-ANDESITE
QUARTZ-ANDESITE
BRECCIATED FELSPAR PORPHYRY
TUFF
SHEET JOINTS
FLAT BEDDING
SLICKENSIDES
SHEAR
SILICIFIED
SILICIFIED FLAT
SILICIFIED
SILICIFIED
SILICIFIED